Pie Warmer

Instruction manual

Model: GF454-A/GF455-A

Safety Tips

- Position the appliance on a flat, stable surface.
- When positioning the appliance, maintain a distance of 20cm (7 inches) between the appliance and walls or other objects for ventilation. Increase this distance if the obstacle is a heat source.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product.
- Consult Local and National Standards to comply with the following:
    - Health and Safety at Work Legislation
    - BS EN Codes of Practice
    - Fire Precautions
    - IEE Wiring Regulations
    - Building Regulations
- DO NOT immerse the Pie Warmer in water, or use jet/pressure washers to clean it.
- Always switch off and disconnect the power supply to the appliance before cleaning.
- Always allow the Pie Warmer to cool down before cleaning, maintaining or moving to avoid the risk of burns.
- DO NOT use the appliance for anything other than its intended use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- This appliance is not suitable for use by children.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an APURO agent or a recommended qualified technician in order to avoid a hazard.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your APURO product.

Pack Contents

The following is included:

- Pie Warmer
- Sliding glass door x 2
- Glass display panel
- Wire rack x 3
- Element Guard
- Water Reservoir

APURO prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage. Should you find any damage as a result of transit, please contact your APURO dealer immediately.

Installation

To install the Pie Warmer:

1. Remove the Pie Warmer from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from its surfaces.

2. Take the glass display panel and raise it at an angle into the upper track at the rear of the unit **[Fig. 1]**.

3. Once at the top of the track, position the bottom of the glass above the lower track **[Fig. 2]**.

4. Carefully lower the glass into the bottom track **[Fig. 3]**.

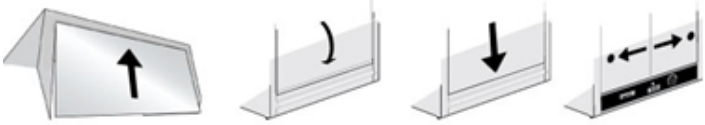

Fig. 1 Fig. 2 Fig. 3 Fig. 4

5. Slide the wire racks into the bracket on the inner side of the Pie Warmer.

6. Insert the two sliding door panels in the same manner as the display panel. Ensure the handles are located towards the outside edges of the appliance **[Fig. 4].**

7. Connect the plug to a suitable mains socket and turn on the power supply.

Operation

1. Add water (0.5L) to the water reservoir

2. Set the thermostat to the desired temperature.

3. The unit will cycle on and off to maintain the set temperature.

The green indicator light and illuminated interior lamp shows when the unit is switched on

The red indicator light shows when the desired temperature has been reached.

Cleaning, Care and Maintenance

- Always turn off the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning.
- The inner body of the appliance should be wiped down at the end of each day's operation. Additional cleaning may be required depending on frequency of use.
- Warm soapy water is recommended for cleaning. Cleaning agents may cause damage or leave harmful residues when used for a prolonged period on stainless steel.
- A APURO dealer or qualified technician should carry out repairs if required.

Telephone Helpline: 1300 225960

Troubleshooting

If your APURO Pie Warmer develops a fault, please check the following table before making a service call.

Fault	Probable Cause	Action
The unit is not heating up and the green indicator light is Off	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call APURO agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call APURO agent or qualified technician
The unit heats up but the red indicator light is Off	Indicator light is faulty	Call APURO agent or qualified technician
The unit is not heating up or heats up slowly and the indicator light is On	Incorrect operation	Ensure: • thermostat has been set correctly • doors are closed • thermostat sensor bulb has not been removed or damaged
	Thermostat failure	Call APURO agent or qualified technician
	Element failure	Call APURO agent or qualified technician

Technical Specifications

Model	Voltage	Power	Current	Dimensions h x w x d	Weight (kg)	Approx. Pie	Heat up Time	Operating Temperatu
GF454-A	220-240V 50Hz	350W	1.5A	500 x 595 x390	16	30	27 minutes	30 - 90°C
GF455-A	220-240V 50Hz	650W	2.8A	582 x 755 x390	23	60	28 minutes	30 - 90°C

Electrical Wiring

This appliance is supplied with a 3 pin, moulded, AUS plug and lead, with a 13 amp fuse as standard. The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit
If in doubt consult a qualified electrician.
Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

APURO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

APURO products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of APURO. Every effort is made to ensure all details are correct at the time of going to press, however, APURO reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

Equipment Type	**Pie Warmer**
Model	**GF454-A / GF455-A**
Legislation	**C-Tick** **AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment**
Standards	**EN 55014-1:2006, EN 55014-2:1997+A1** **EN 61000-3-2:2006, EN 61000-3-3:1995+A1+A2** **EN 60335-2-37:2002+A1** **EN 60335-1:2002+A11+A1+A12+A2+A13 with AS/NZS 60335-1:2002+ A1+A2+A3, EN 62233:2008**
Producer Name	**Apuro**
Producer Address	**15 Badgally Road,** **Campbelltown,** **NSW 2560**

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

Date	**05/03/13**
Signature	
Full Name	**Richard Cromwell**
Position	**Marketing Director**

apuro